



1.

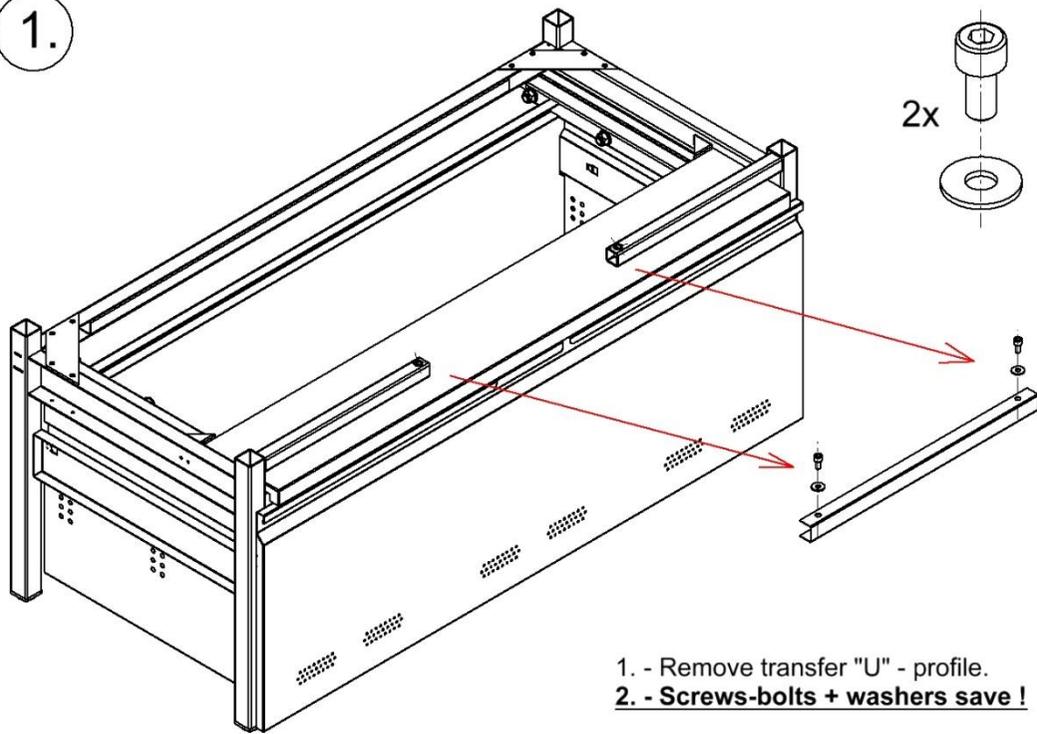

1. - Remove transfer "U" - profile.
 2. - **Screws-bolts + washers save !**

2.


1.

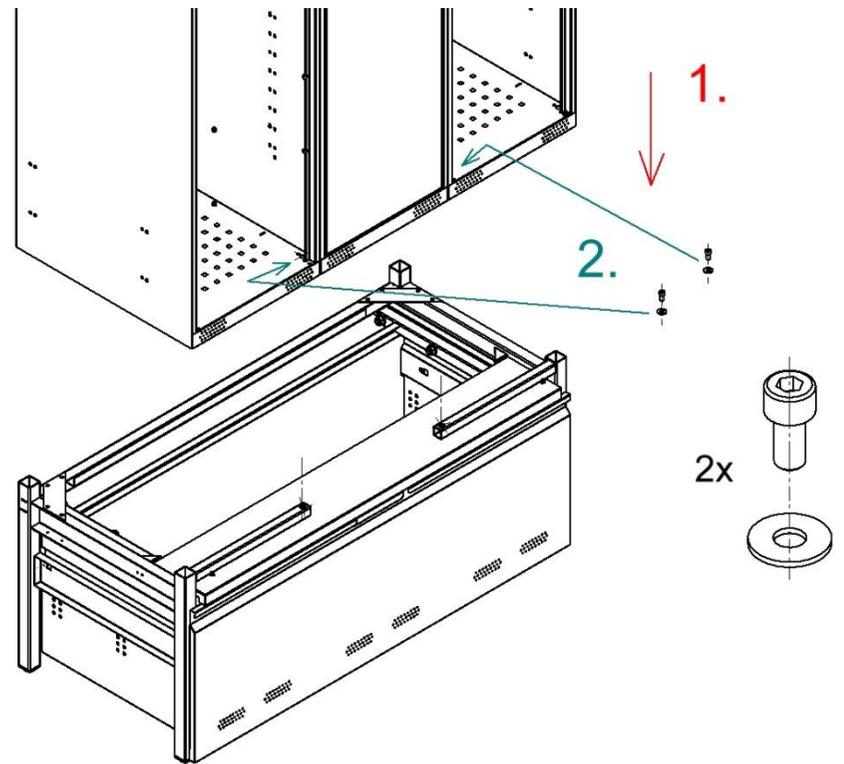

Anchoring to the wall.

2x
anchor 6x45

D5,3x15

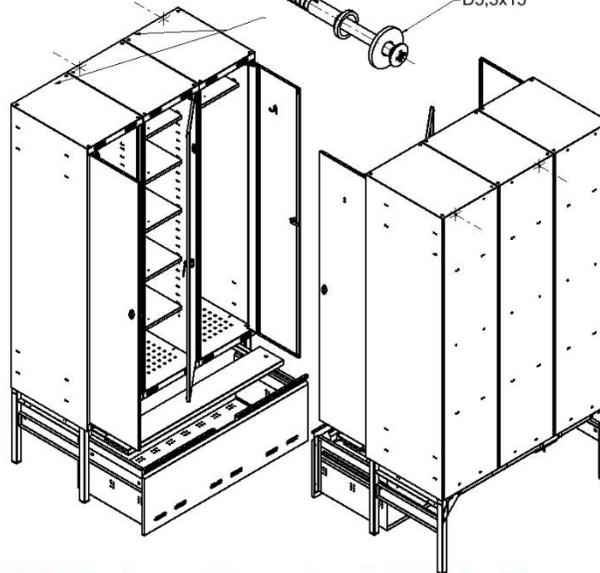


Anchoring through the back walls.

2x

Ø8,4x16

M8x16

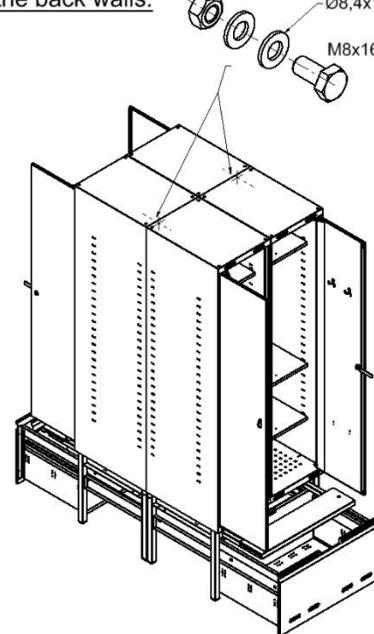

!!! Cabinets must be anchored at the top !!!